




Checking Distance Between Two Points on Trimble Siteworks


1. Tap the menu in the top left.




2. Select the **COGO** menu.

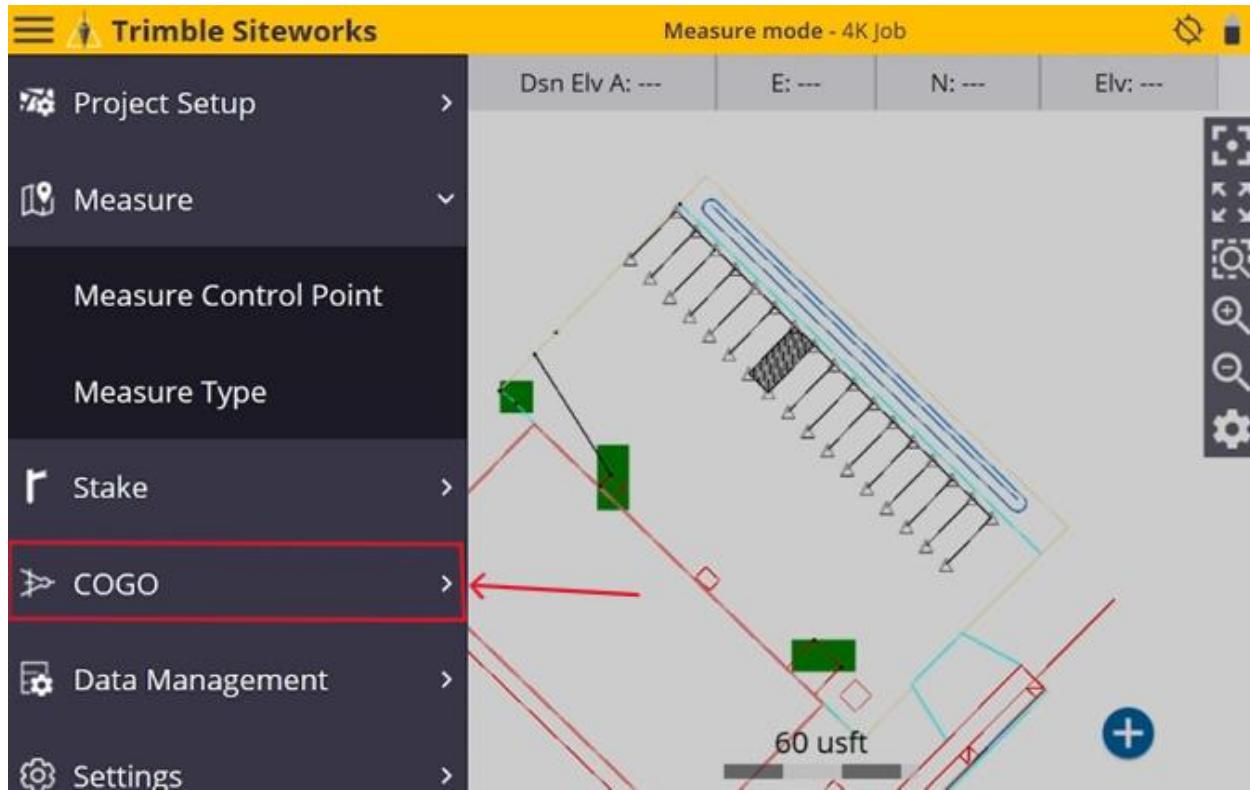


3. Tap on **Review & Edit Data**.

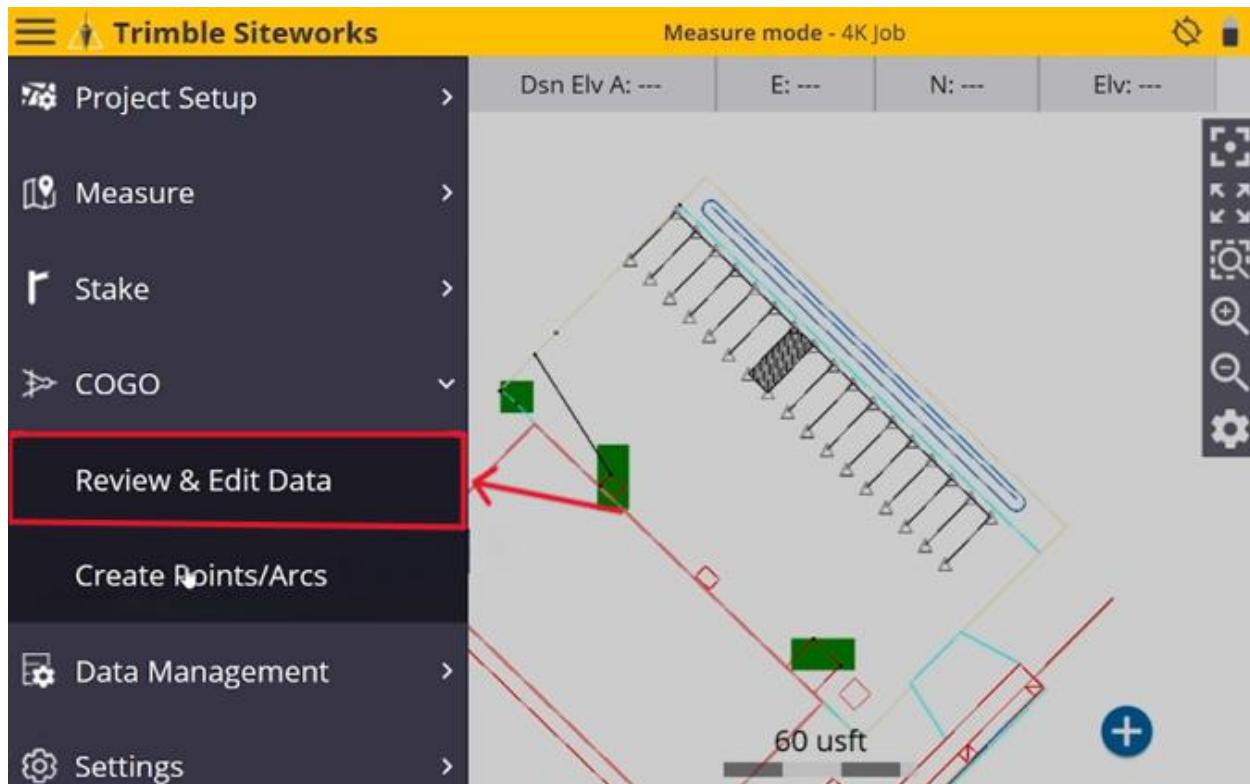


4. Select the distance between points icon.

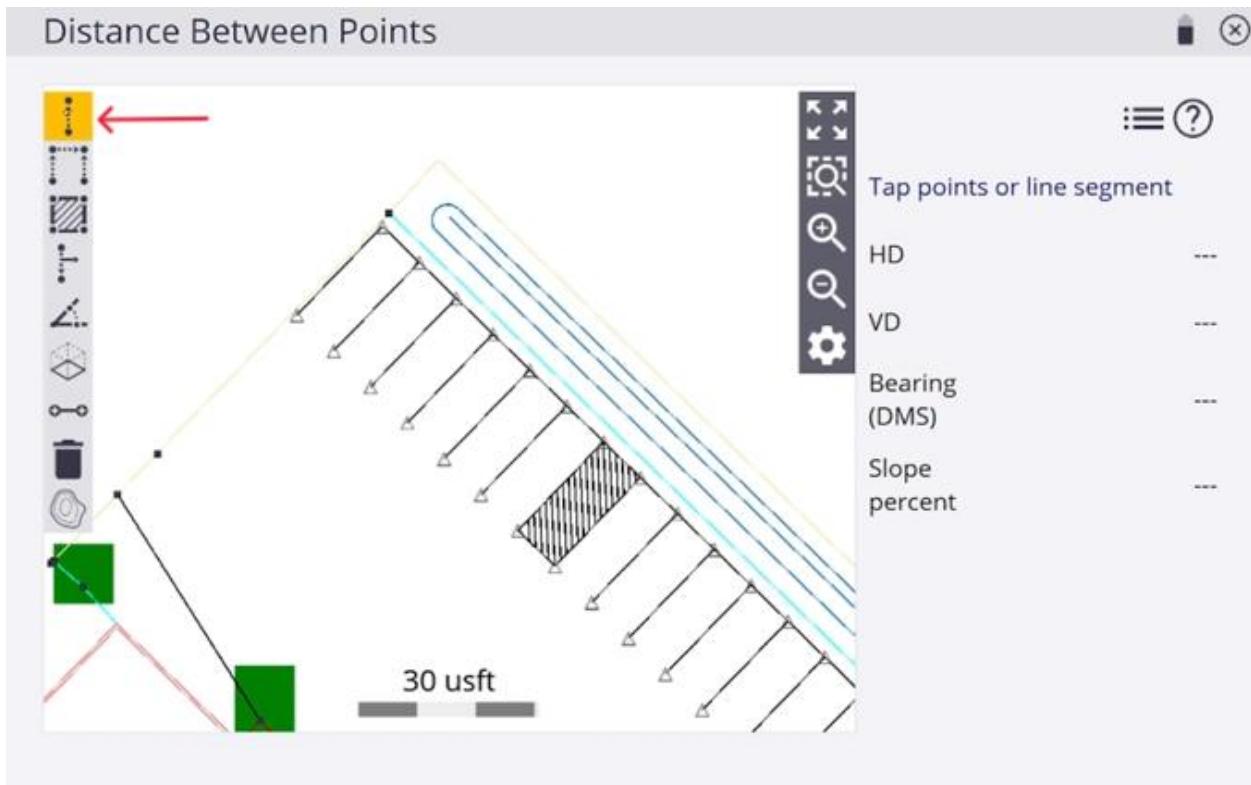

5. Tap on your first point.

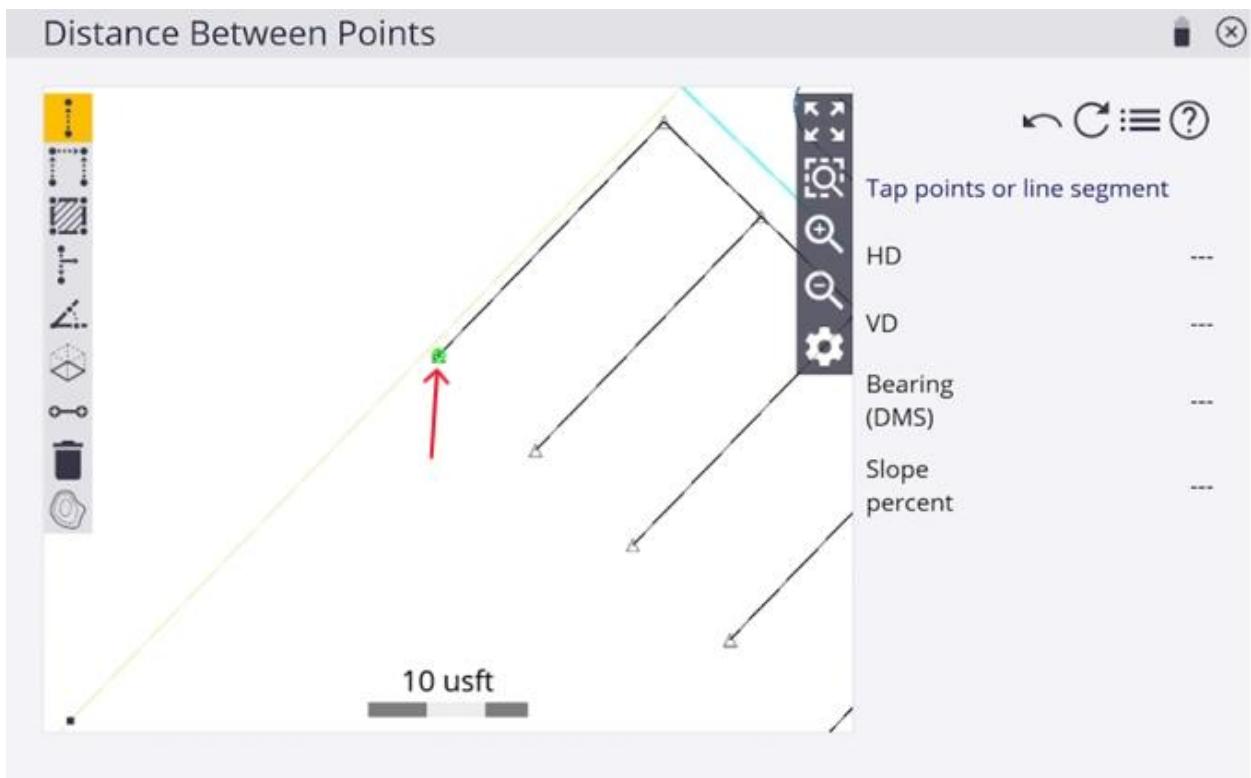

6. Select your second point, the HD is the horizontal distance, the VD is the vertical distance between the points. After verifying tap **ACCEPT**.

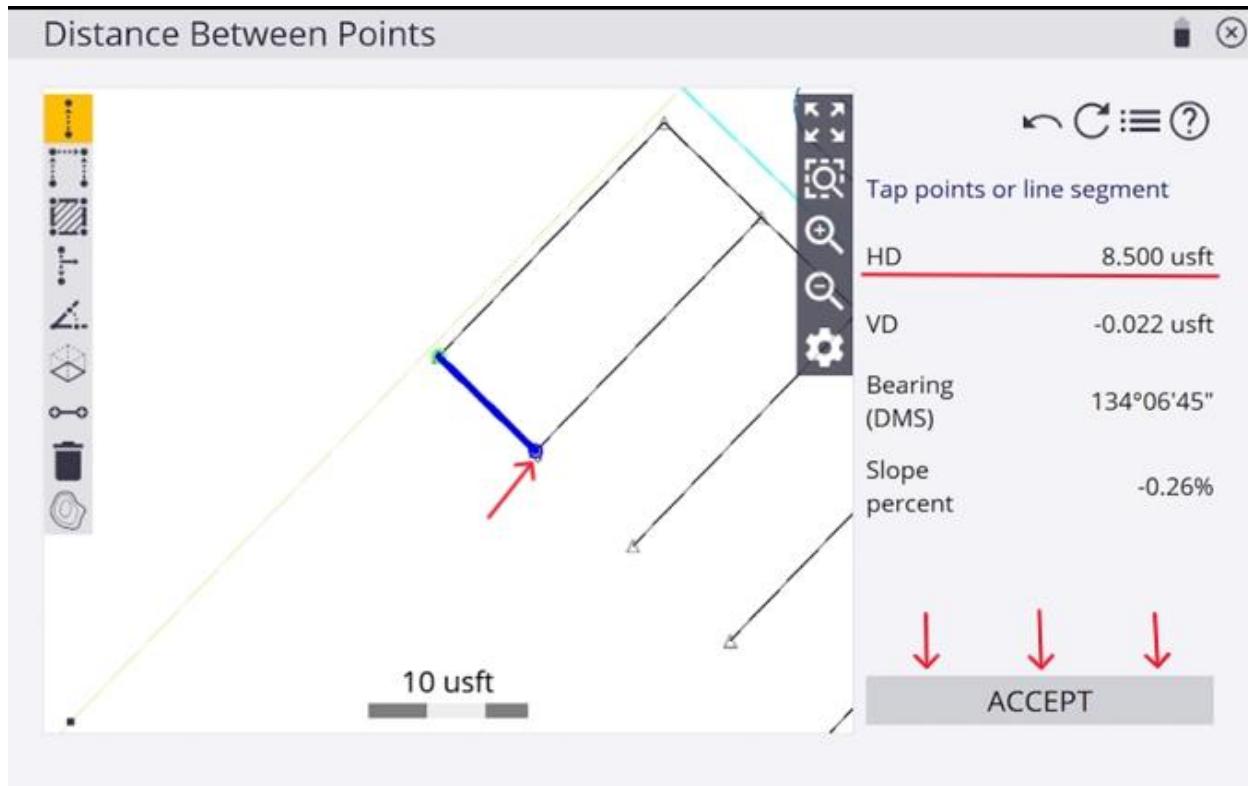

5900 NE 152nd Ave. Suite 120 Vancouver, WA 98682

Phone: (564) 274-0024 | Fax: (360) 635-4924 - Email: Support@4kequipment.com