





How to Export Measured Data on Trimble Siteworks


1. Tap the menu in the top left.

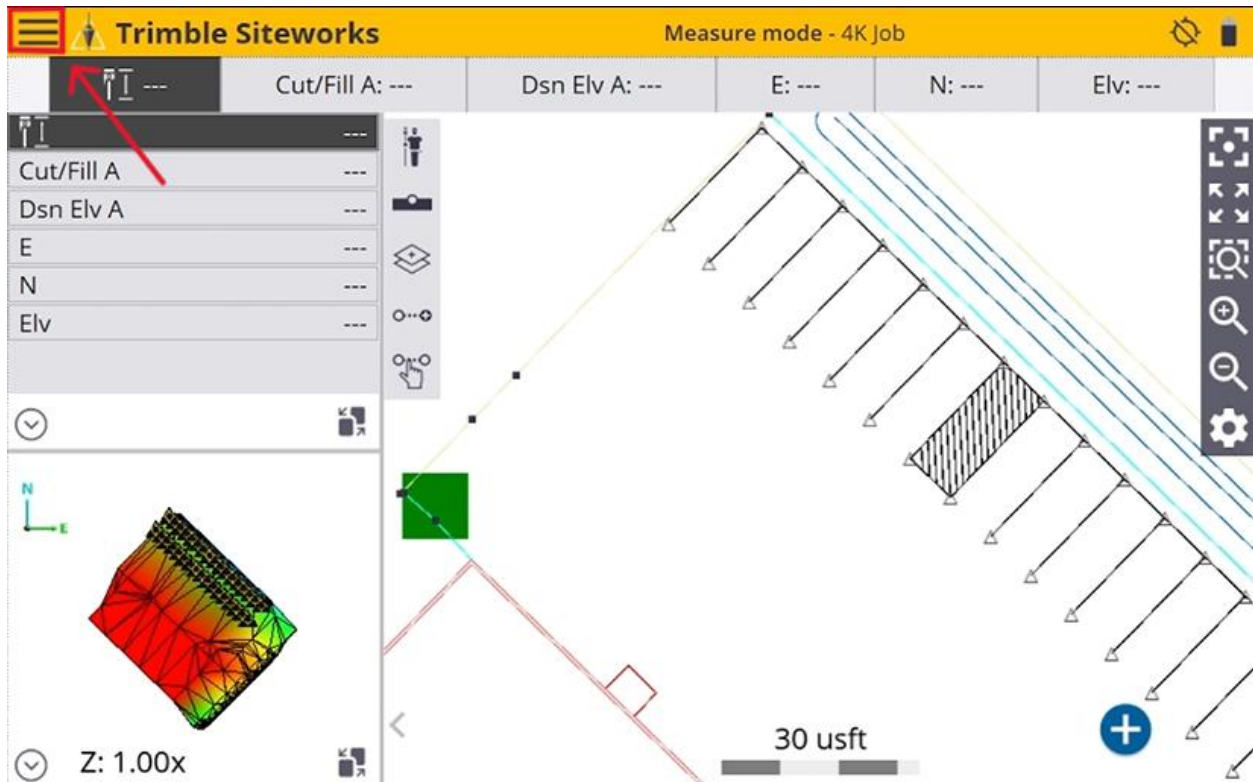

2. Select “Data Management”

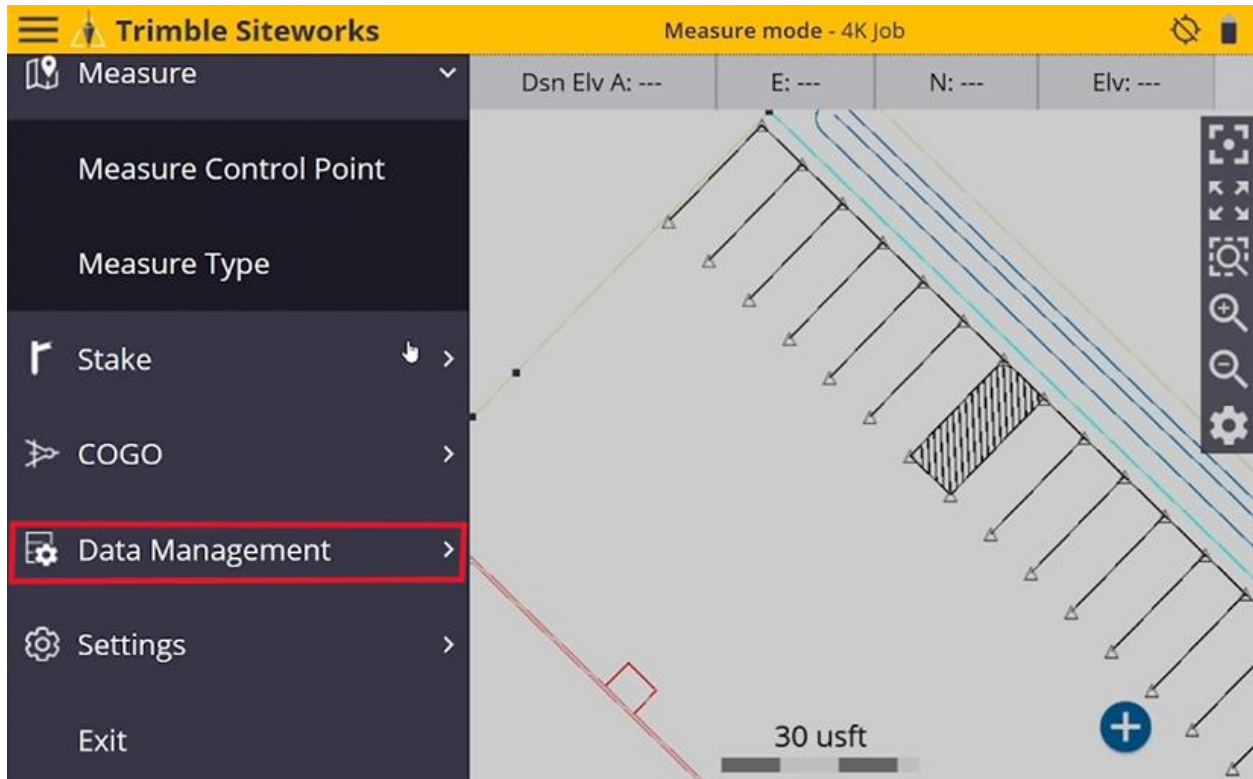

3. Tap on “Export Measured Data”

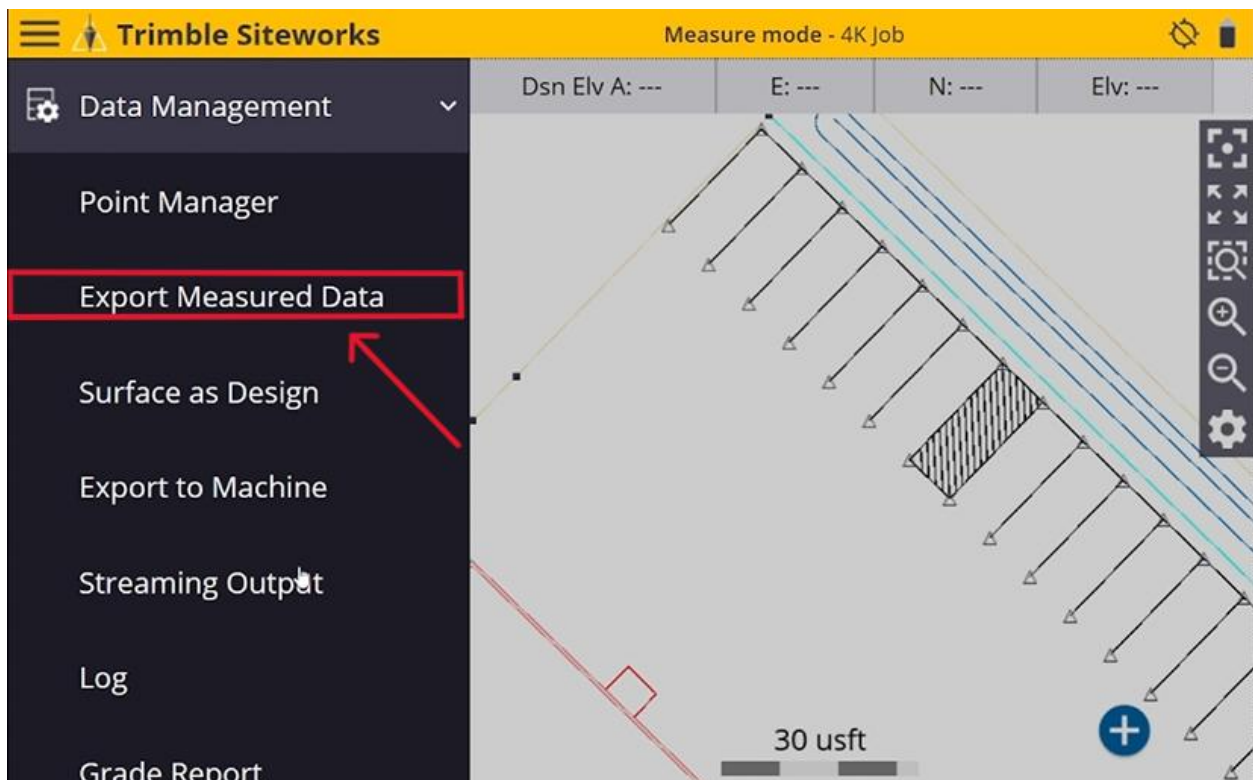

4. Select on File Location

Export Measured Data

Export type

CSV File

Coordinate order

P, N, E, Z, D

Include QA data

Yes

Include control points

Yes

Include FXL attributes

Yes

File location

Memory Card (D:\)

File name

4K

ACCEPT

5. Tap on your Memory Card / USB Drive.

Export Measured Data

Export type

CSV File

Coordinate order

P, N, E, Z, D

Include QA data

Yes

Include control points

Yes

Include FXL attributes

Yes

File location

Memory Card (D:\)


File name

Device

Memory Card (D:\)

ACCEPT

6. Tap “OK”

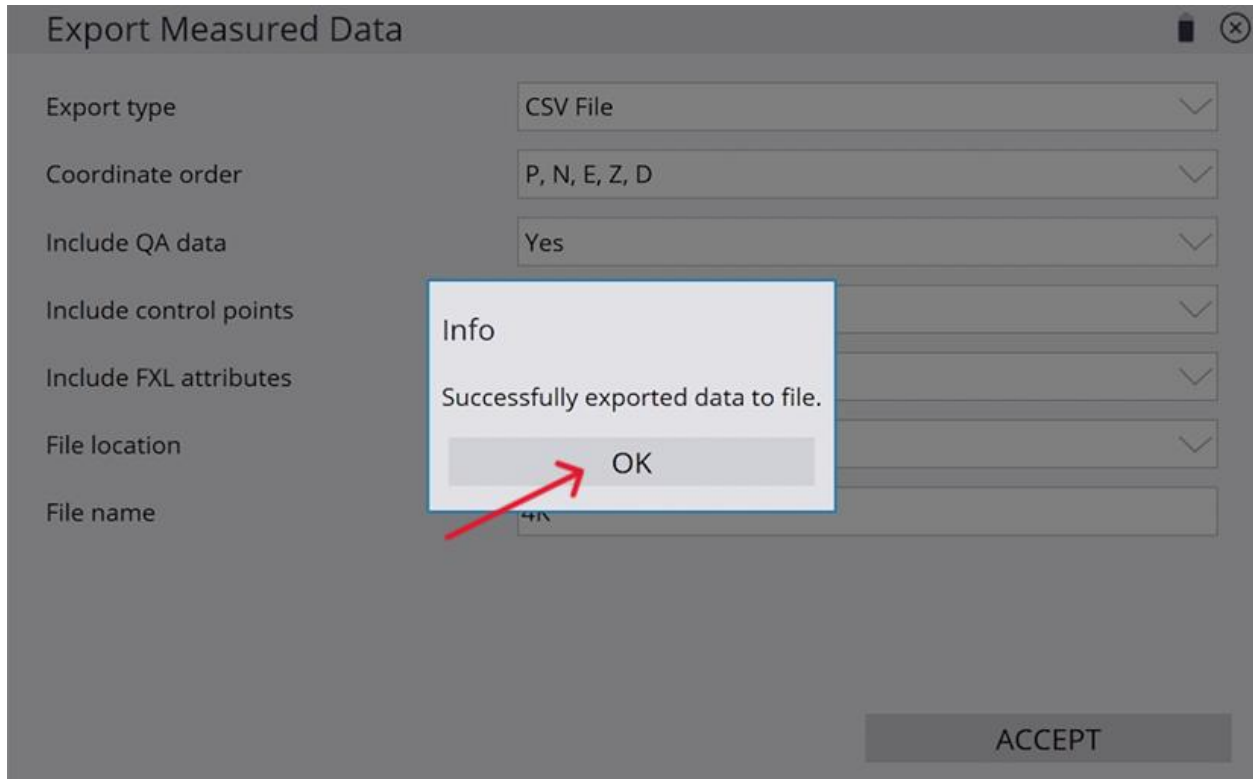

5900 NE 152nd Ave. Suite 120 Vancouver, WA 98682

Phone: (564) 274-0024 | Fax: (360) 635-4924 - Email: Support@4kequipment.com