





How to Stake-out a Topo Shot using Topcon Pocket 3D V15


1. Tap “Tools” then hit “Stake-out”.

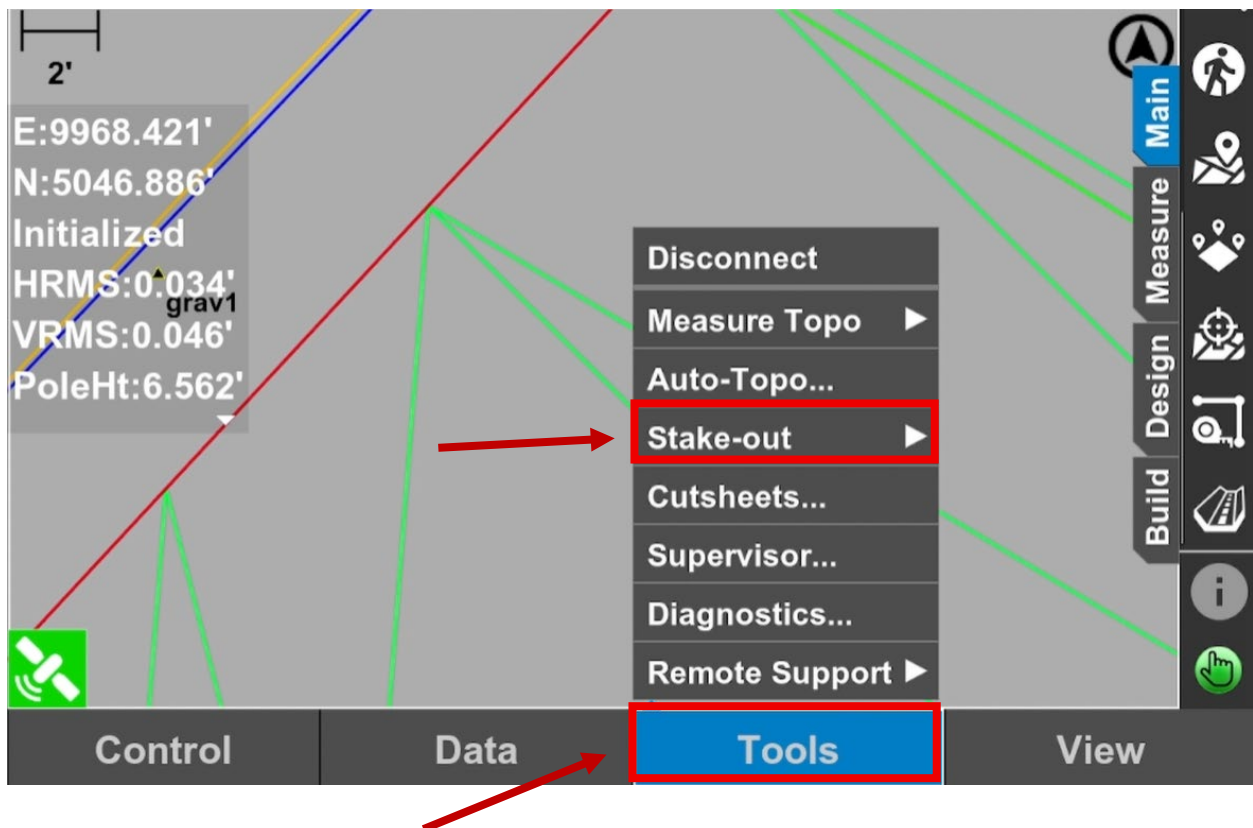


2. Select **"Point list..."**.

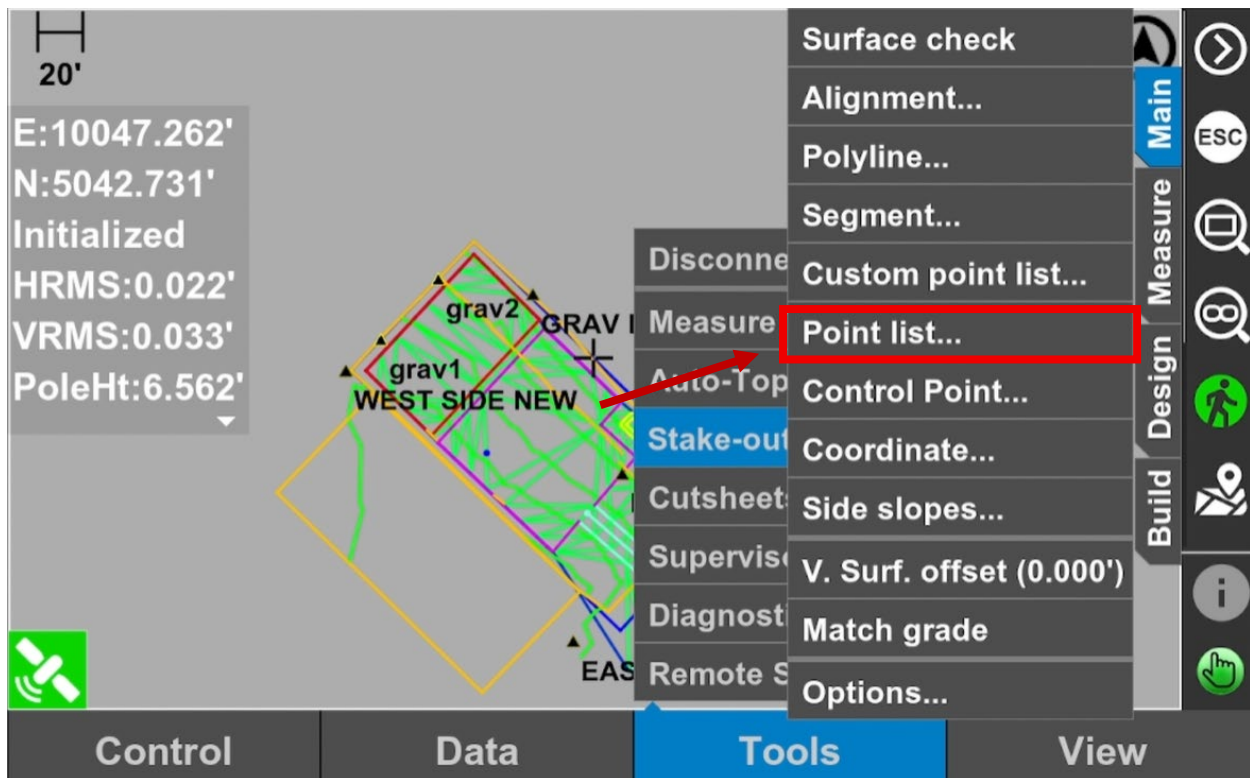


3. Select the point you want to measure. Once a box appears on your selected point, hit **"OK"**

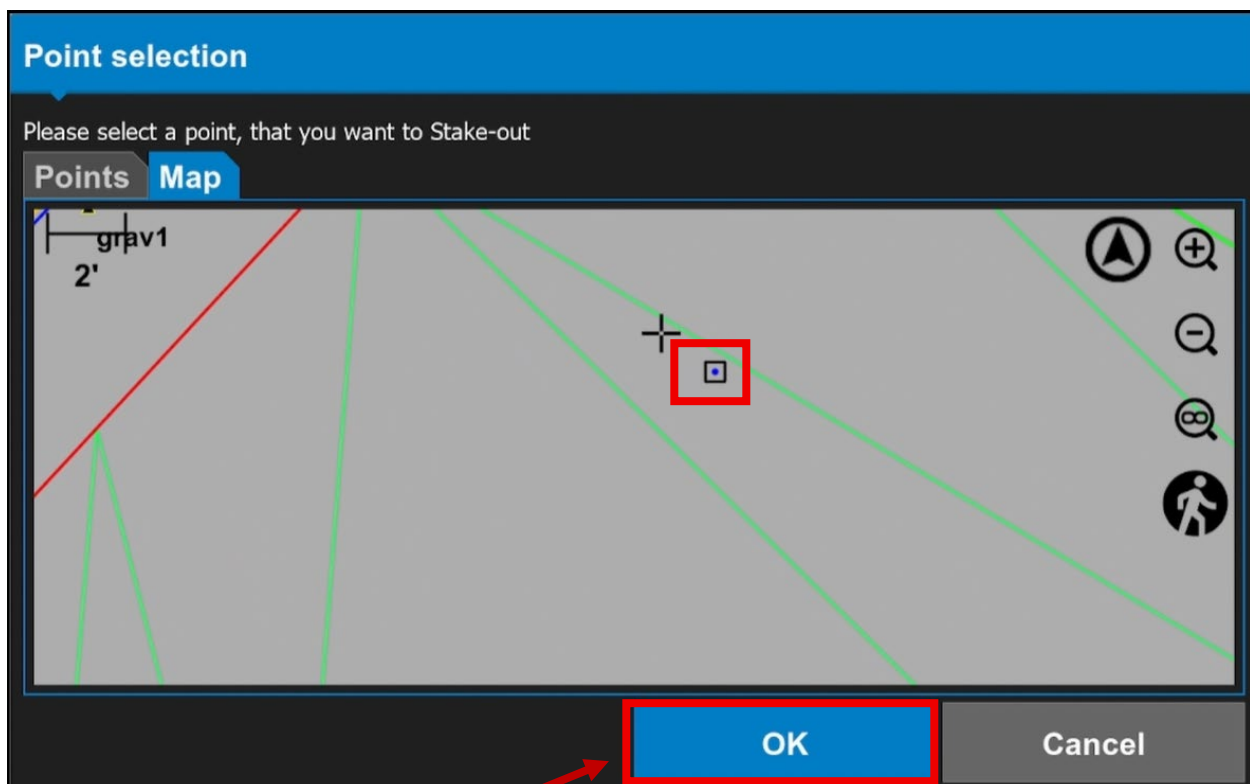


4. Alternatively, you can click **"Points"**

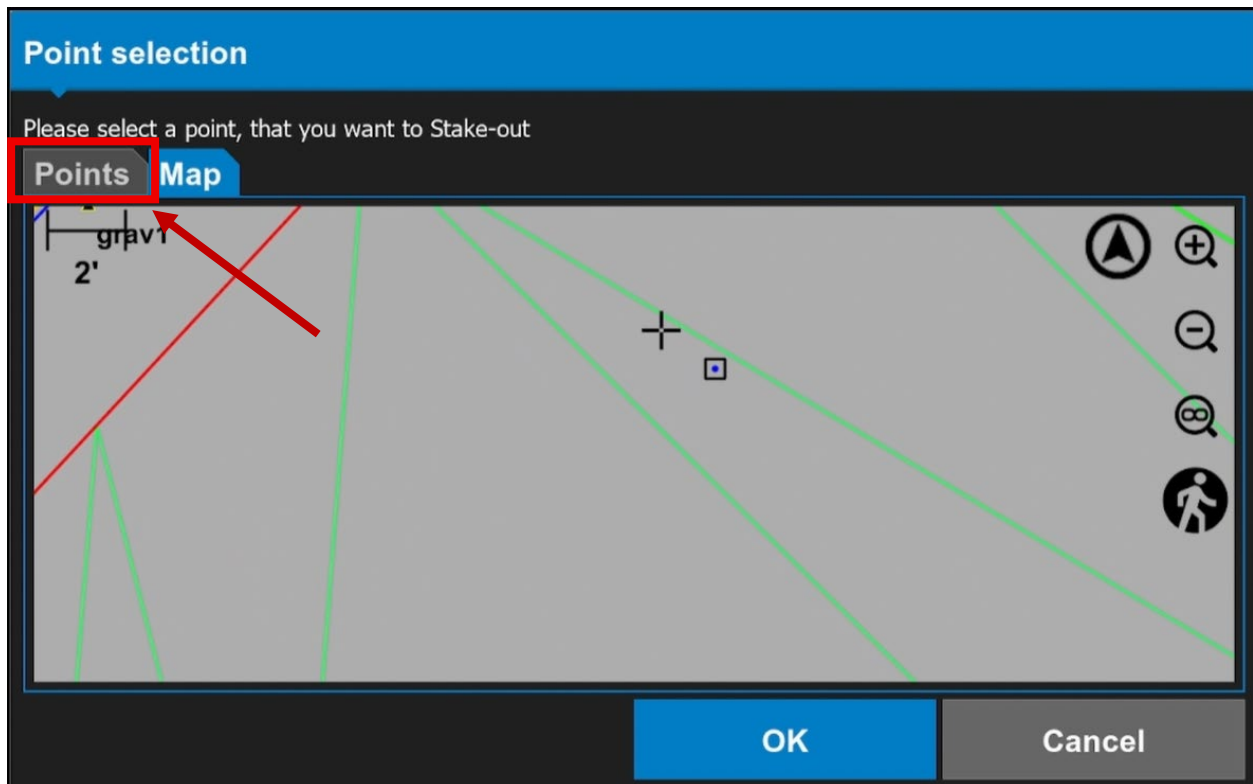


5. Choose the point you want to measure then click **"OK"**.

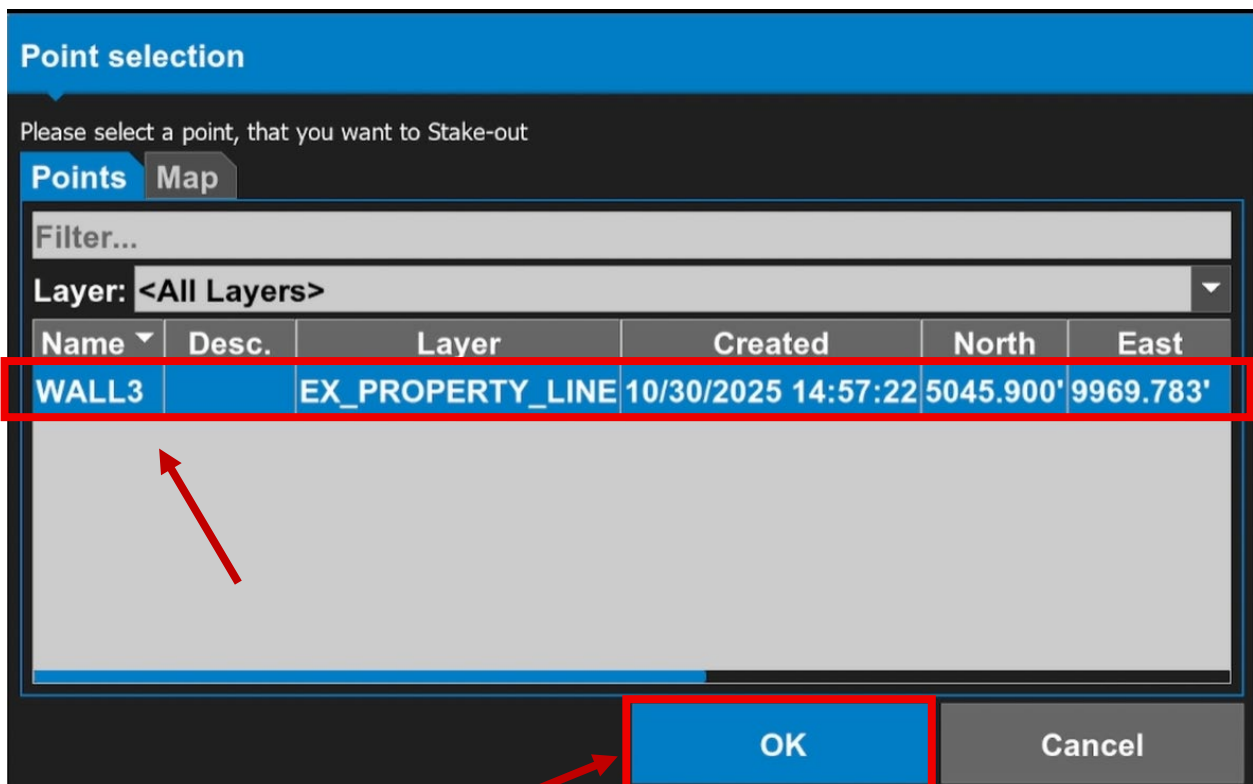


6. Walk towards the arrow pointing to the point you selected.

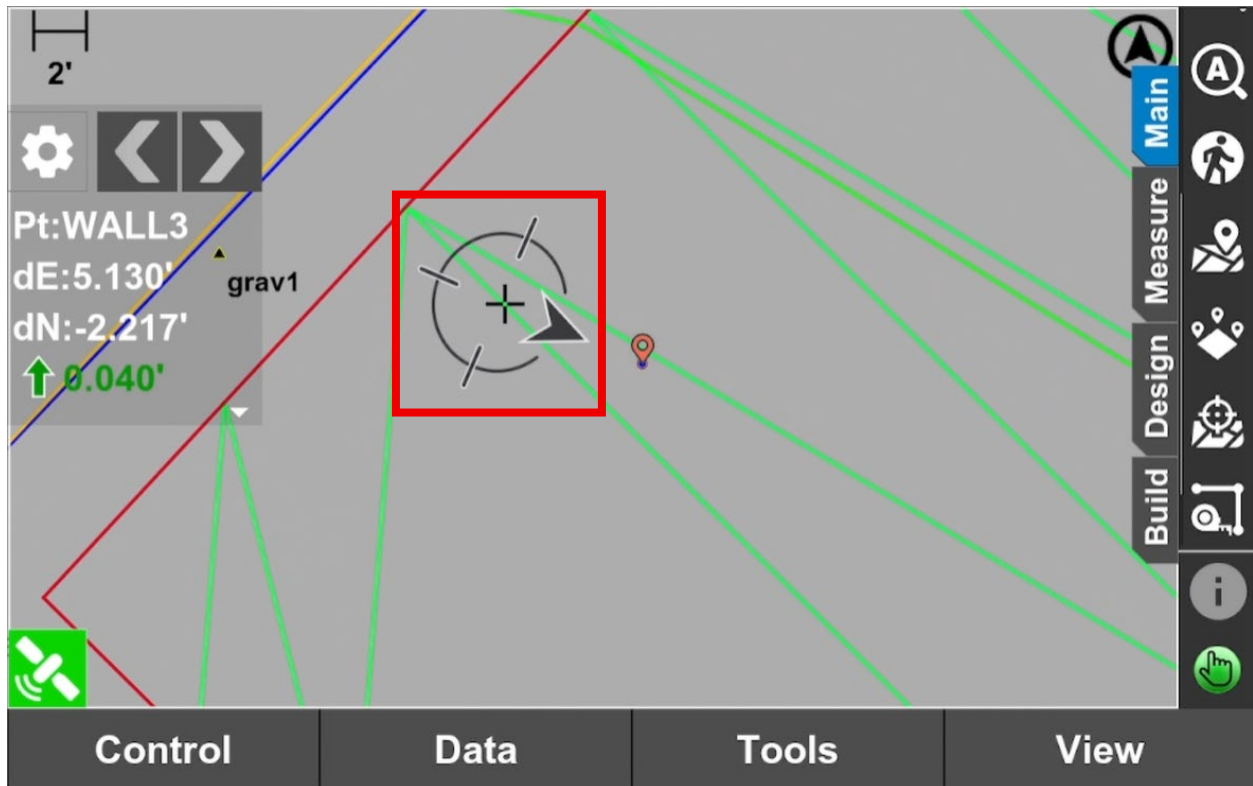

7. Make sure the equipment is in the center, and also make sure that the values are as close to zero. Once it's in the middle, mark your tip with a spray paint or any identifier available.

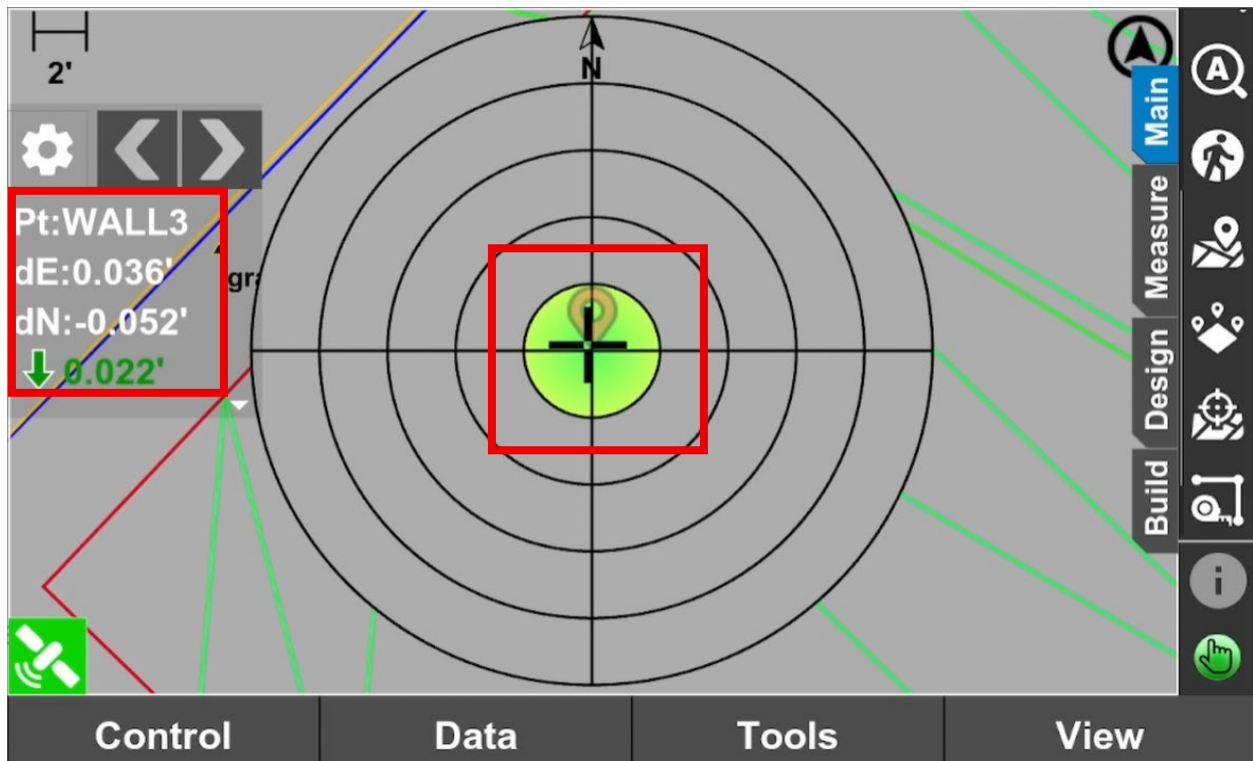

8. To stop the stake-out, click **"Tools"** then hit **"Stake-out"**.

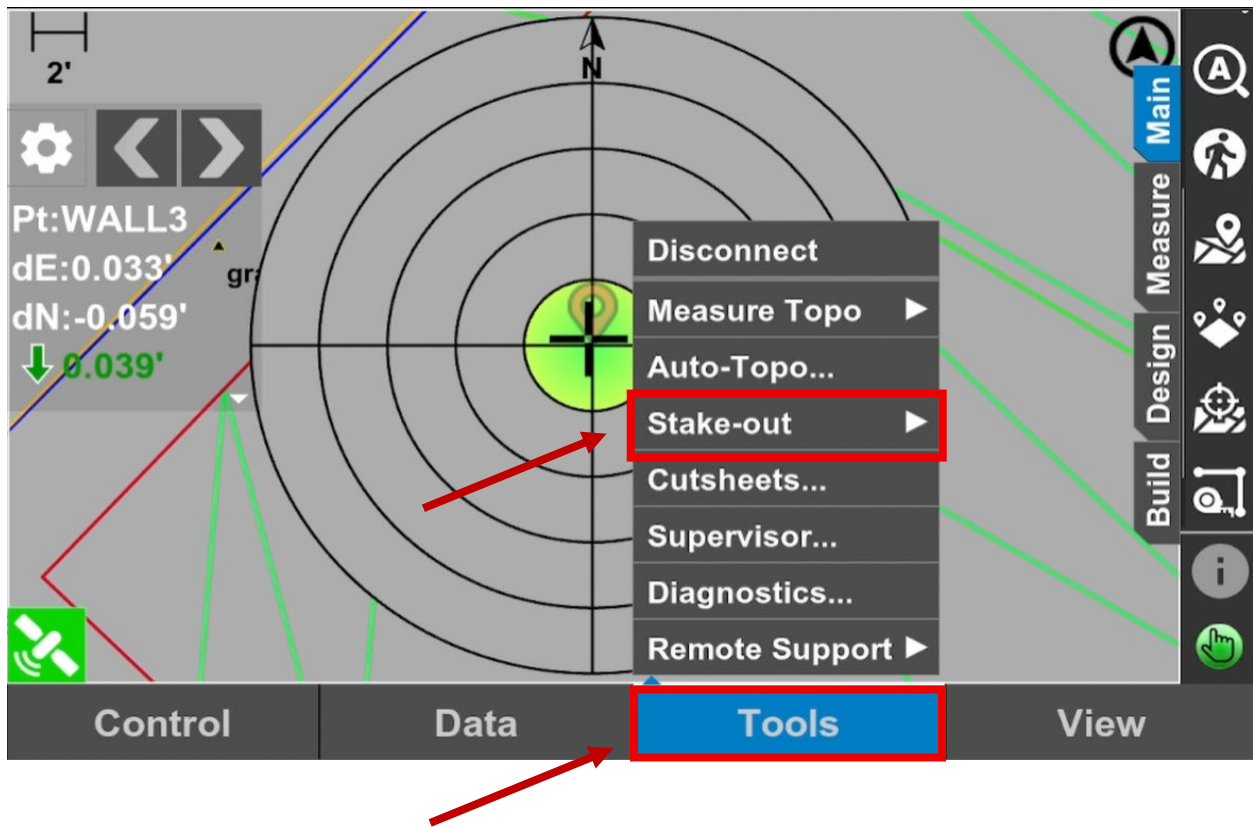

The screenshot shows the 'Tools' menu with the following options: Stop stake-out, Measure stake..., Next point, Previous point, V. Surf. offset (0.000'), Match grade, Options..., Stake-out (highlighted), Cutsheets..., Supervisor..., Diagnostics..., and Remote Support. The 'Stake-out' option is highlighted with a blue bar and a right-pointing arrow. A red arrow points from the 'Tools' tab at the bottom to the 'Stake-out' option in the menu.